

© Copyright Uponor Limited

Copyright in this drawing belongs to Uponor Limited. This drawing may not be used, sold, licensed, transferred, copied or reproduced in whole or in part or in any manner or form other than with the prior written consent of Uponor Limited.

Uponor

Electrical Schematic

Smatrix Move

Ref: SM-1.0A

Refer to the Quick Start Guide to setup pump and zone valve.

Uponor reserve the right to alter specifications and operating parameters for all their systems at any time as part of their policy of continuous product development.

