
veltamat 3D Remote Control ECA 60

User's Operating Instructions 3/2001









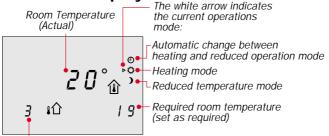


External temperature

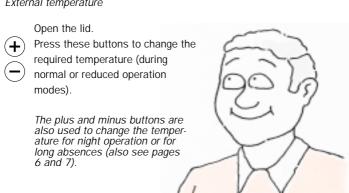

2

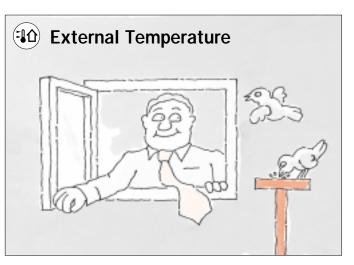

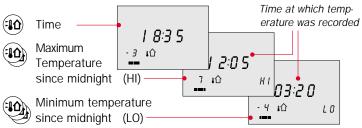

Operation of veltamat 3D in position





You can change the temperature for one or several days on a temporary basis, for example for your day at home or for a holiday. (At the end of the period when you wish to cancel this setting press the button and hold for three seconds).



Press once for every day with normal operation or....




Press once for every day with short periods of temperature reduction.

The buttons are under the left hand cover.

Operation with veltamat 3D in position 🕒



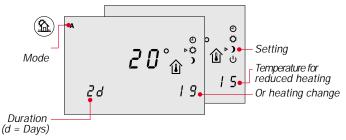

Operation with veltamat 3D in position





You can change the temperature for one or several hours on a temporary basis - for example whilst you are at home or if you go out. (To cancel this special time period before it ends, press button 3 for 3 seconds)



Press once for each hour with increased heating or...



Press once for each hour of reduced heating




Press the plus or Minus Button to



change the initial works setting

Operation with veltamat 3D in position igoplus



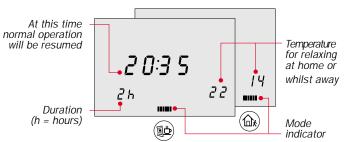

Setting the clock

Open the lid and press the button for three seconds.

The minutes flash.

Hours Year '99 Minutes Month, Day

Adjust the minutes with the (+)



٥r



Press the button to set the hours. Set the hours. Repeat the procedure to set the year and the date.

Finally press this button for 3 seconds



5000695