

La section simple à vanne d'équilibrage et débitmètre pour collecteur de chauffage en EP




Renseignements sur le projet

| | |
|-----------------------------|---------------------|
| Nom du poste : | Lieu : |
| Ingénieur : | Date de soumission: |
| Entrepreneur : | Présentée par: |
| Représentant du fabricant : | Approuvé par : |

Données techniques

| | |
|---------------------------------|---|
| Subcomponent Material | Manifold: PA66-GF30 Valve Insert, Handwheels: POM Metal Inserts: Brass C38500 Axel: Stainless Steel Spring: Stainless Steel O-ring: EPDM |
| Loop Cv | 1.4 Cv |
| End type 1 | ISO 228-G 3/4" |
| Temp/pressure ratings | 140 °F (60 °C) at 87 psi (6 bar) 158 °F (70 °C) at 72 psi (5 bar) 176 °F (80 °C) at 58 psi (4 bar) 194 °F (90 °C) at 44 psi (3 bar) |
| Operating temperature min. [°F] | 44.6 °f |
| Max. fluid flow rate | 15.4 gpm |
| Prop 65 label required? | Yes |

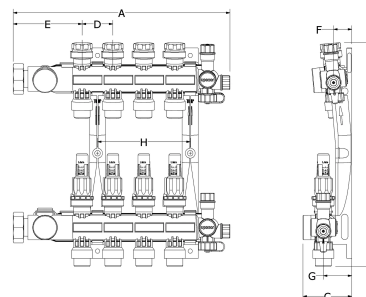

Informations sur le produit et utilisation de l'application

The Engineered Polymer (EP) Heating Manifold Single Section with Balancing Valve and Flow Meter (A2670003) adds additional loops to an EP Heating Manifold assembly for use in hydronic radiant heating and cooling systems. Use only propylene glycol in radiant systems with EP Heating Manifolds; never use ethylene glycol.

| Nom de la pièce | Numéro de pièce | Weight per UOM [lbs/UOM] |
|--|-----------------|--------------------------|
| EP Heating Manifold Single Section with Balancing Valve and Flow Meter | A2670003 | 0.46 |

L'installation

Select the proper bracket spacing for the manifold and mount the bracket to the wall. Snap the manifold to the bracket. See the installation manual for complete instructions. Note: Use only propylene glycol in radiant heating and cooling systems with EP Heating Manifolds; never use ethylene glycol. Refer to the EP Heating Manifold Installation Guide for a complete chemicals list.

Applications connexes

- Radiant Heating and Cooling Systems
- Permafrost Protection Systems
- Turf Conditioning Systems

Remarques :

Adaptable Actuators:

EP Heating Manifold, two-wire Actuator (A3030522); Thermal Actuator, four-wire (A3010522) with EP Heating Manifold Actuator Adaptor (A2671300)

Connection Dimensions: R32

Notes de bas de page

Coordonnées de la personne-ressource

Uponor Inc.
5925 148th Street West
Apple Valley, MN 55124
T 800.321.4739
F 952.891.2008

Uponor Ltd.
6510 Kennedy Road
Mississauga, ON L5T 2X4
T 888.594.7726
F 800.638.9517