υροποι


TotalFit couplings


Project mormation	
Job name:	Location:
Engineer:	Date submitted:
Contractor:	Submitted by:
Manufacturer's representative:	Approved by:

l echnical data	
Material	Engineered Polymer
Temp/pressure ratings	73 °F (23 °C) at 160 psi (11 bar)
	180 °F (82 °C) at 100 psi (6.9 bar)
	200 °F (93 °C) at 80 psi (5.5 bar)
Prop 65 label required?	No
Desident laterary day and see list	

Product information and application use

TotalFit[™] is the professional-grade engineered polymer (EP) push-to connect solution that provides greater value for residential projects with the same versatility and speed as brass push-to-connect fittings for PEX, PE-RT, CPVC, and copper piping systems.

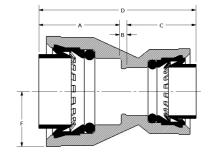

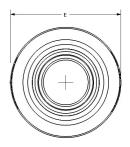

Part name	Part no.	A [inch]	B [inch]	C [inch]	D [inch]	E [inch]	F [inch]	End Type 1	End Type 2	Weight per UOM [Ibs/UOM]
TotalFit Coupling, 1" x 1	TF4771010	1.134	0.169	1.134	2.437	1.76	0.88	TotalFit 1"	TotalFit 1"	0.1
TotalFit Coupling, 1/2" x 1/2	TF4775050	0.913	0.091	0.913	1.917	1.13	0.565	TotalFit 1/2"	TotalFit 1/2"	0.04
TotalFit Coupling, 1/2" x 3/4	TF4775075	1.067	0.094	0.913	2.075	1.457	0.728	TotalFit 1/2"	TotalFit 3/4"	0.07
TotalFit Coupling, 3/4" x 1	TF4777510	1.154	0.098	1.067	2.319	1.76	0.88	TotalFit 3/4"	TotalFit 1"	0.1
TotalFit Coupling, 3/4" x 3/4	TF4777575	1.067	0.098	1.067	2.232	1.457	0.728	TotalFit 3/4"	TotalFit 3/4"	0.07

Pert no. Codes Standards xouplings All UPC IRC IPC NPC of Canada UMC CMC CPC IMC NSF/ANSI/CAN 372 ASTM F877 NSF/ANSI/CAN 61 NSF 14 ASSE 1061		Standards	Listings
		F877 NSF/ANSI/CAN 61 NSF/ANSI	IAPMO K-13573 IAPMO K- 13571 IAPMO K-13572
additional codes, standards, or listings:			
TF4775075			
TF4777575			
2	All e additional codes, standards, or listings: TF4775075	All UPC IRC IPC NPC of Canada UMC CMC CPC IMC e additional codes, standards, or listings: TF4775075	All UPC IRC IPC NPC of Canada UMC CMC CPC IMC NSF/ANSI/CAN 372 ASTM F877 NSF/ANSI/CAN 61 NSF/ANSI 14 ASSE 1061 e additional codes, standards, or listings: TF4775075

Installation	Related applications
Install on PEX, PE-RT, CPVC, and copper piping systems. Use deburr and depth tool to remove excess material or burrs and mark the appropriate depth on pipe. If using flexible PEX or PE-RT, install the insert inside the pipe first before making the connection. Refer to the Uponor TotalFit Instruction Sheet for additional information.	Plumbing Hydronic Heating & Cooling

Footnotes	Contact information			
	Uponor Inc.	Uponor Ltd.		
	5925 148th Street West	6510 Kennedy Road		
	Apple Valley, MN 55124	Mississauga, ON L5T 2X4		
	T 800.321.4739	T 888.594.7726		
	F 952.891.2008	F 800.638.9517		